

Unichip Toyota Landcruiser 200 Series Non DPF and DPF Delete Exhaust

Remove the factory exhaust from the vehicle including any sensors. When removing the rubber hoses from the differential pressure sensor, retain one hose on the sensor and loop it into the open port. This will prevent contaminants entering the sensor (DPF model pictured – non DPF models do not have sensors)




Remove the highest EGT sensors closest to the turbo and the oxygen sensors on both sides (DPF model only).



Fit both of these sensors and the provided blanking plug to the Unichip turbo dump pipes (DPF model only).

Note use the other EGT port if the vehicle is fitted with an aftermarket EGT gauge sensor

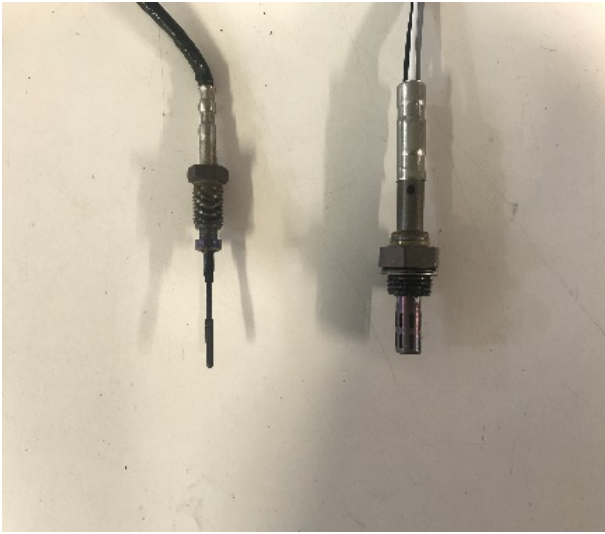

On the vehicles not fitted with a DPF use the supplied plugs to blank all ports on the Unichip dump pipes.

