



TOYOTA Fuel Pressure Relief Valve (FPRV)



1, Remove Intercooler




2, Locate FPRV on the end of LH Fuel Rail and remove from fuel rail.



3, Using a 3mm Pin Punch, insert pin punch into back of FPRV and very gently hammer the seat out of the FPR Body.

***Be very careful not to lose any parts.**

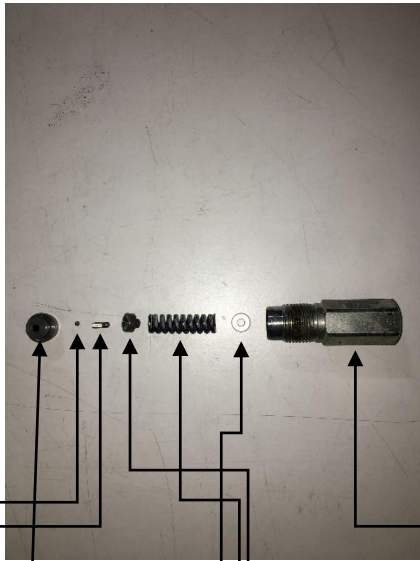

1, FPRV Seat

2, Ball bearing

3, Pin

4, Spring Seat

5, Spring

6, Shim

7, FPRV Body



4, Install 3 x M4 Washers (2.5mm Thick)

Into FPRV Body first then re-assemble in reverse

Order.



5, Gently squeeze FPRV together in vice with soft jaws.

Refit to vehicle and check for any fuel leaks.