



Australia & New Zealand

GU Nissan Patrol ZD30 CRD 2007-2012 PPNIS18.0



1. Disconnect Battery (s).





2. Locate E.C.U behind centre console left hand side of driver's foot well.



3. Remove both the Large and Small ECU plugs.








4. Plug Unichip Plug and Play harness into the factory E.C.U Harness.  
(Ensure plug clips are pulled tight correctly.)




5. Fit plug and play harness to factory E.C.U. (Make sure plugs are square and horizontal to ECU when installing. DO NOT FORCE PLUGS.)

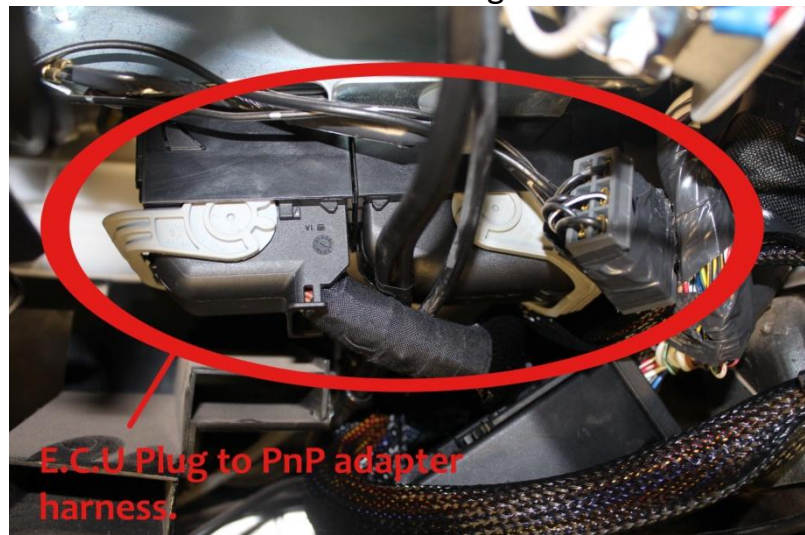



6. Tuck Unichip plug and play harness under centre console and next to steering column. Cable tie unichip plug and play harness to bracket.

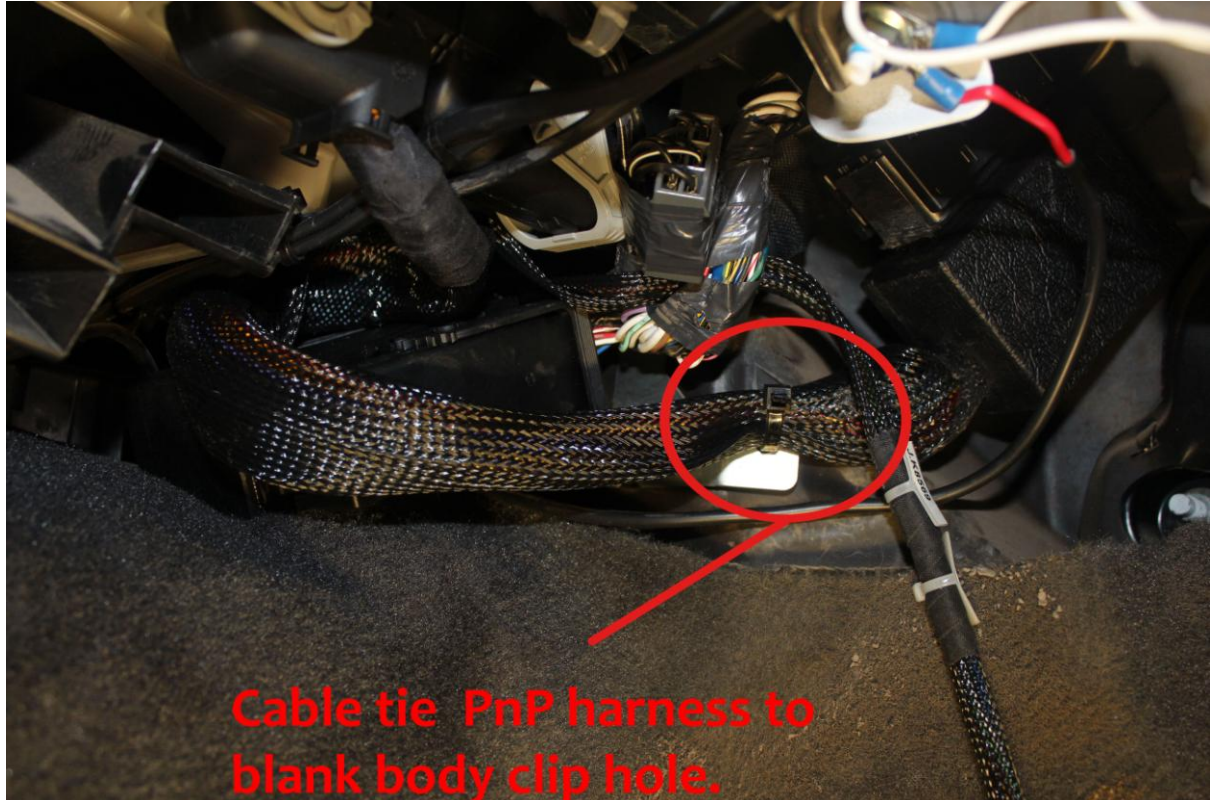

7. Fit Supplied Velcro to back of Unichip and side of E.C.U.







8. Place Unichip on side of E.C.U.



9. Ensure no leads or harness is visible.



10. Reconnect battery(s).

11. Enjoy.