

PPNIS12.4

Nissan Navara D40 YD25ddti 2010 – On



1. Disconnect batter negative terminal.




2. Remove windscreen washer filler, in front of E.C.U. (Right hand rear of engine bay).




3. Locate ECU (Right hand rear of engine bay) and unclip Red ECU tabs, on both large and small ECU Connectors.



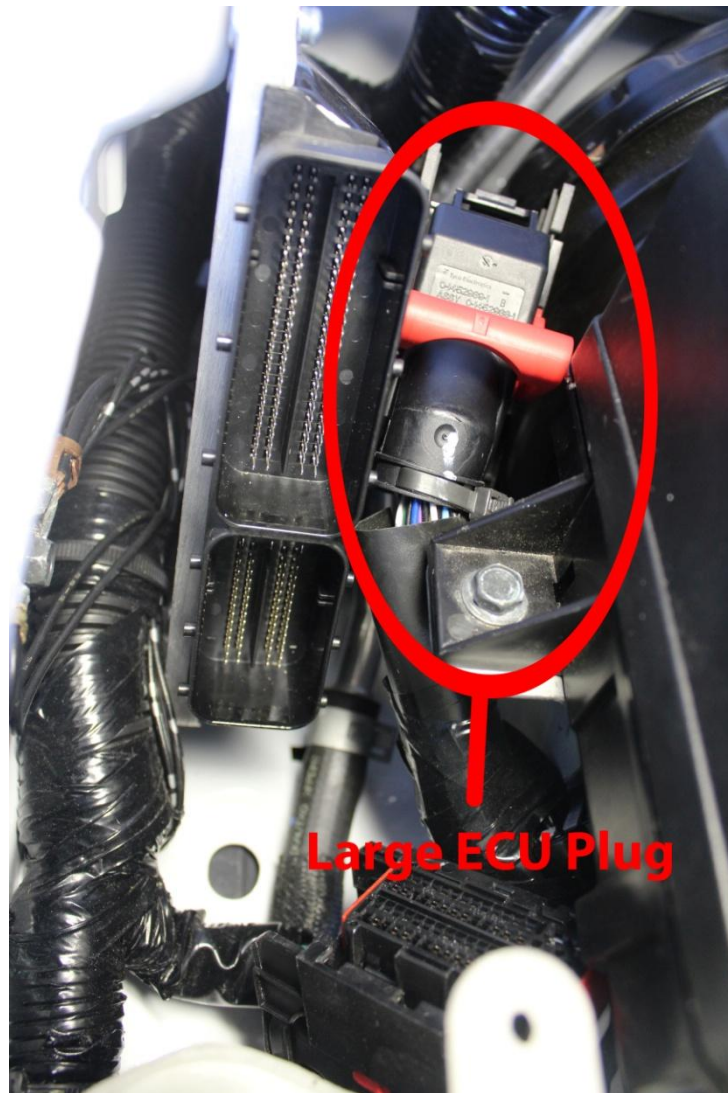

4. Feed Large ECU plug past Relay box towards rear of vehicle.

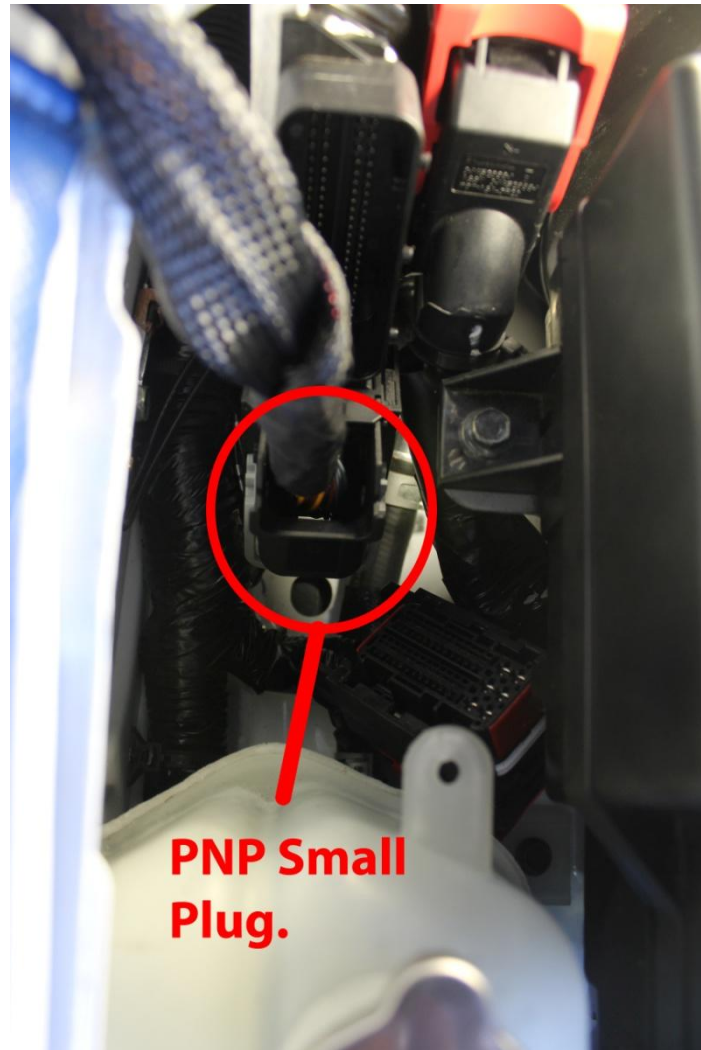

5. Plug Unichip PNP small plug harness into factory ECU. Plug small factory plug into Unichip PNP harness.






6. Plug Big Plug Unichip PNP Harness into factory ECU. Plug factory Big plug to PNP harness.




7. Bend Unichip bracket and mount Unichip. (and optional injector driver) to bracket as shown.

8. Mount Unichip bracket to Battery, reconnect negative battery terminal.

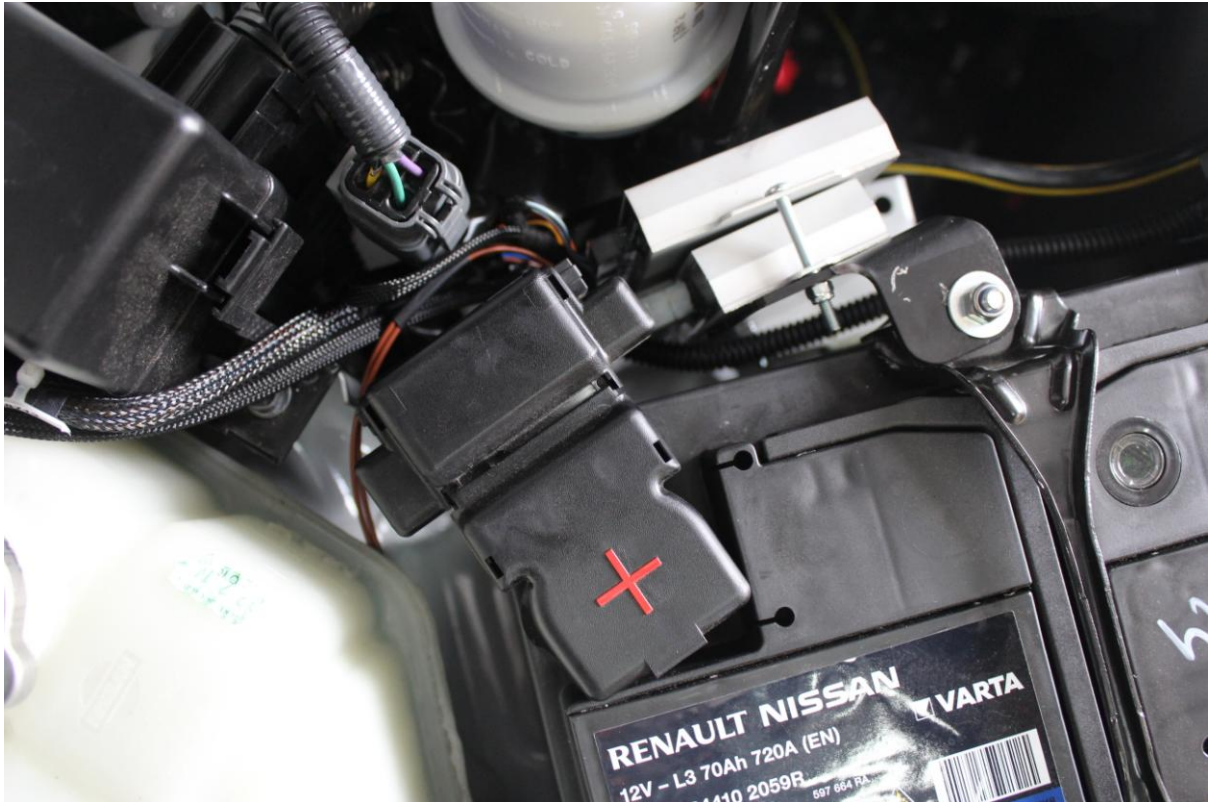

9. Refit washer bottle filler neck.

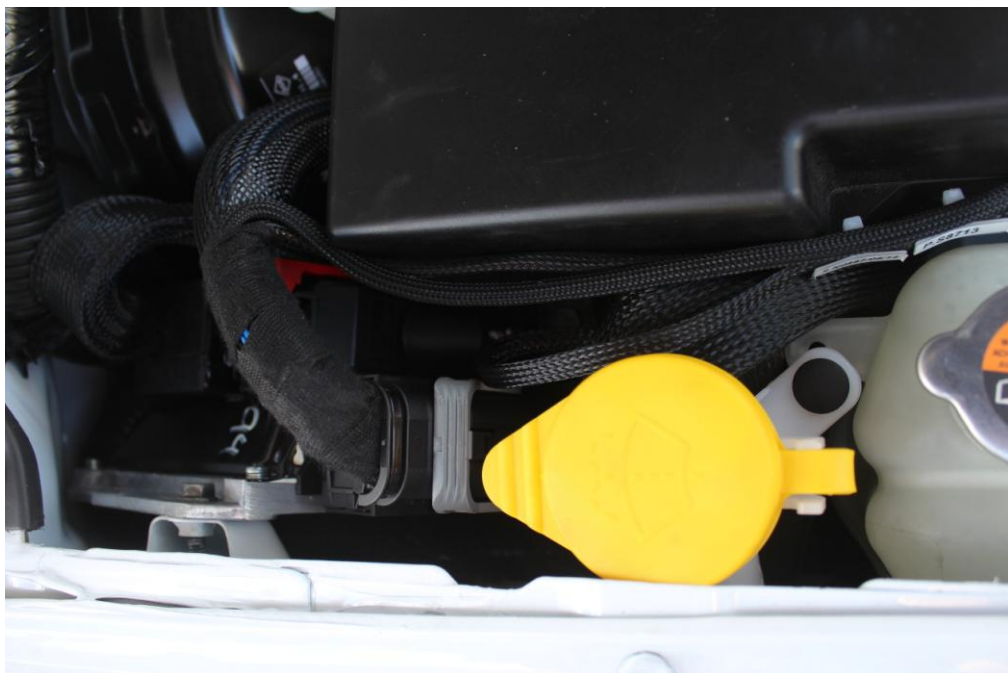

10. Road test and enjoy.