



Australia & New Zealand

Mitsubishi Pajero 3.2lt: **PPMITS08.0**



1. Disconnect negative terminal from battery.



2. Remove Passenger side scuff plate by lifting.





3. Remove kick trim body clip.



4. Remove kick trim.




5. Remove dash trim.






6. Remove 2 x Body clips and remove under dash trim.

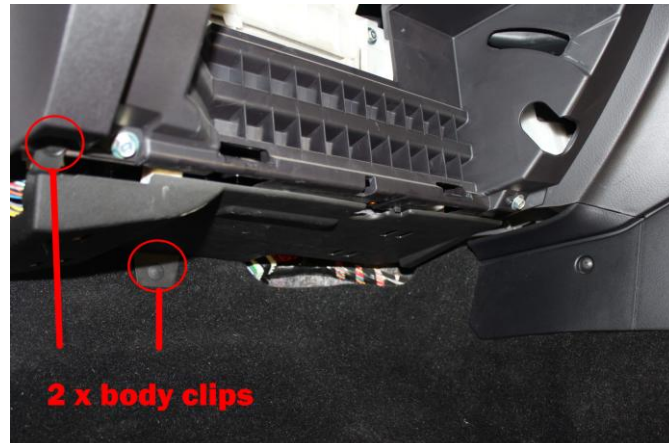

7. Remove 3 x Phillips Screws



8. 2 x M6 bolts and 1x body clip.

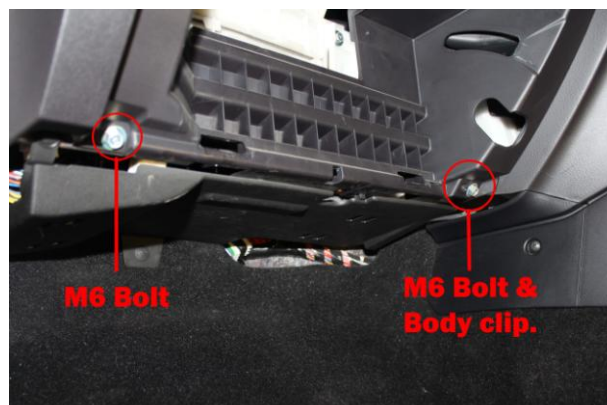




9. Remove glove box light loom.




10. Locate E.C.U against RH side of car high up.

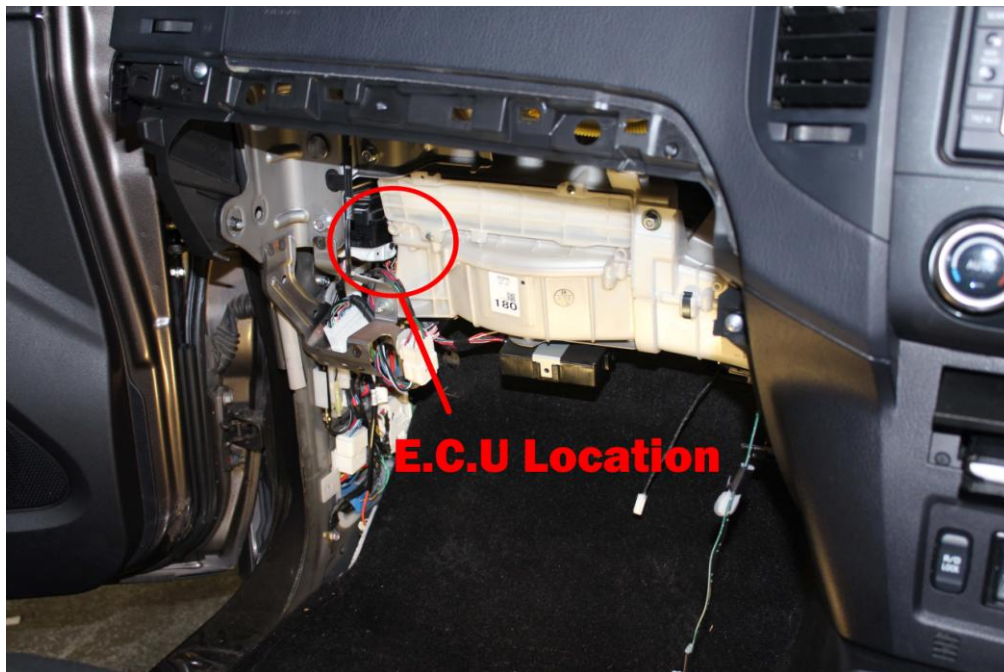





11. Unplug E.C.U.

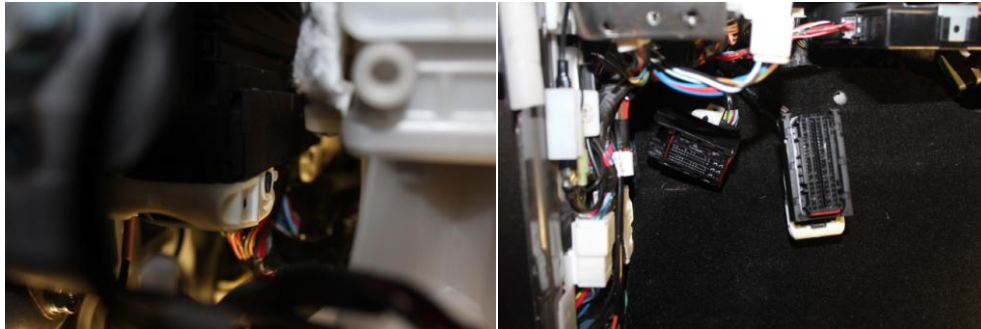

12. Connect small PNP plug first, fit up behind E.C.U against fire wall and fit plug to E.C.U.

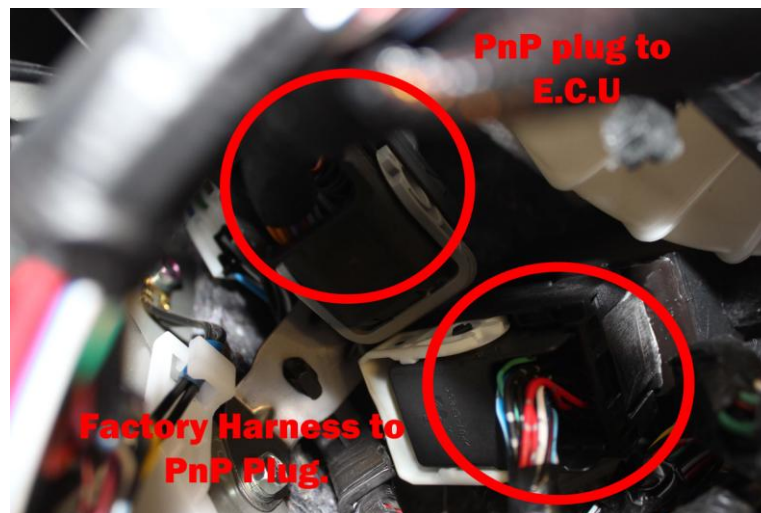

13. Fit larger PNP plug against side of vehicle below E.C.U.

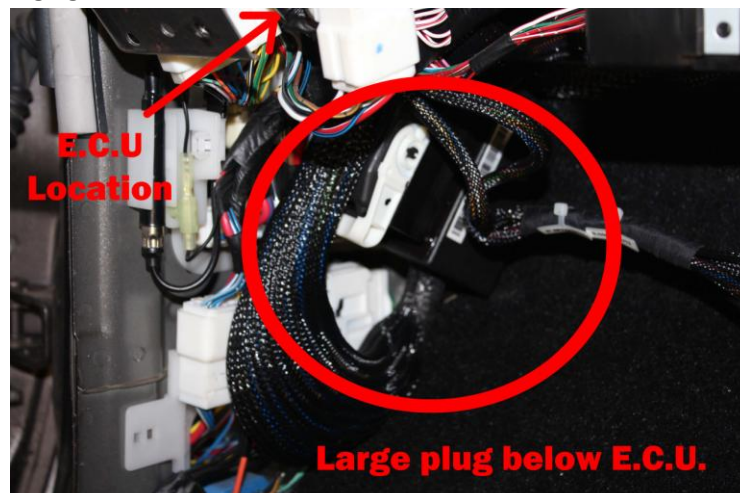



14. Connect Unichip earth to existing earth bolt near floor.




15. Measure 25mm deep x 100mm long from back of kick panel trim and remove material to clear PNP plug.





16. Refit kick trim.

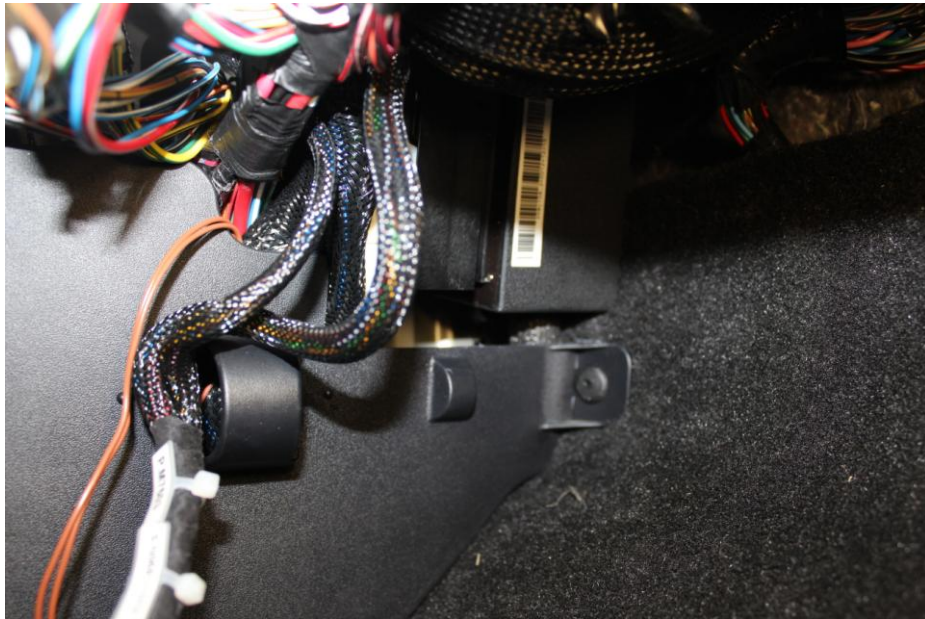


17. Refit "Scuff Plate".





18. Run Unichip and X4 Harness up to LH side of inner glove box bracket & Velcro Unichip and X-4 driver into place.

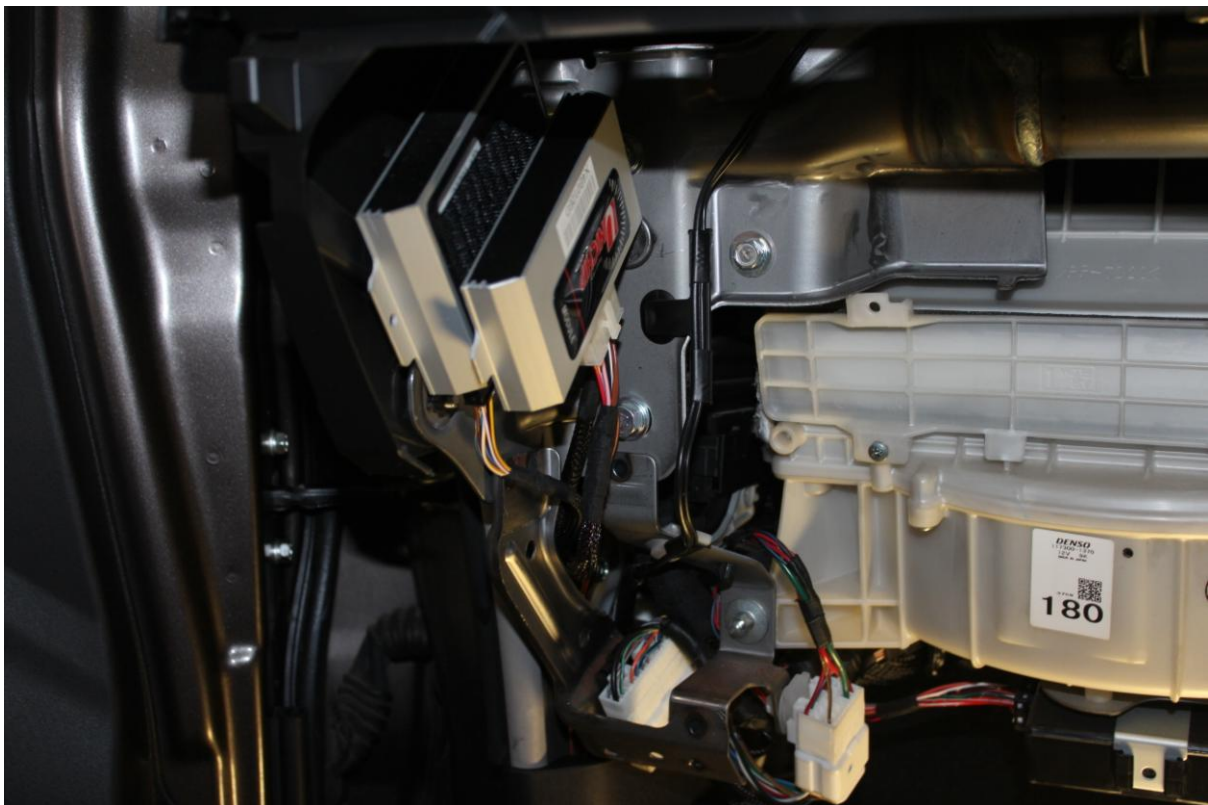

19. Refit all trims after tuning & enjoy.



Australia & New Zealand

