




## 70 SERIES VDJ CATCH CAN KIT INSTRUCTIONS

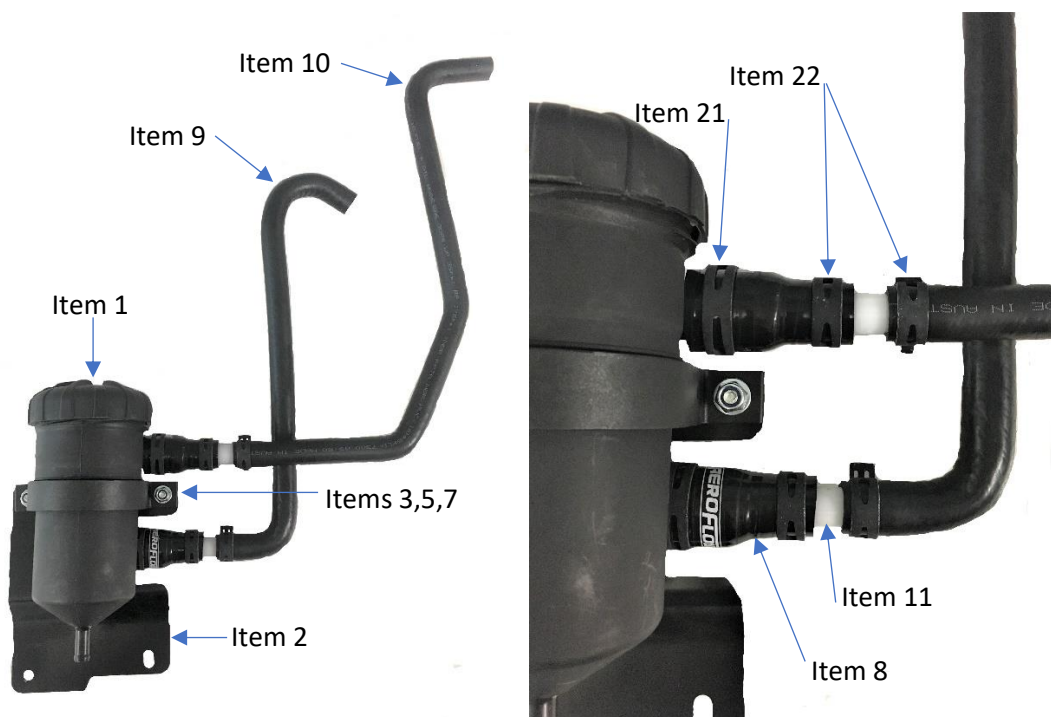

**Step1: Mount Provent (item 1) to bracket (item 2) using items 3,5 and 7.**


**Step2: Install reducers (item 8) to Provent.**

**Step3: Install plastic joiners (item 11) to reducers.**

**Step4: Install spring clamps item 21 and 22.**

**Step5: Install lower hose (item9) to bottom port of Provent.**

**Step6: Install upper hose (item10) to top port of Provent.**

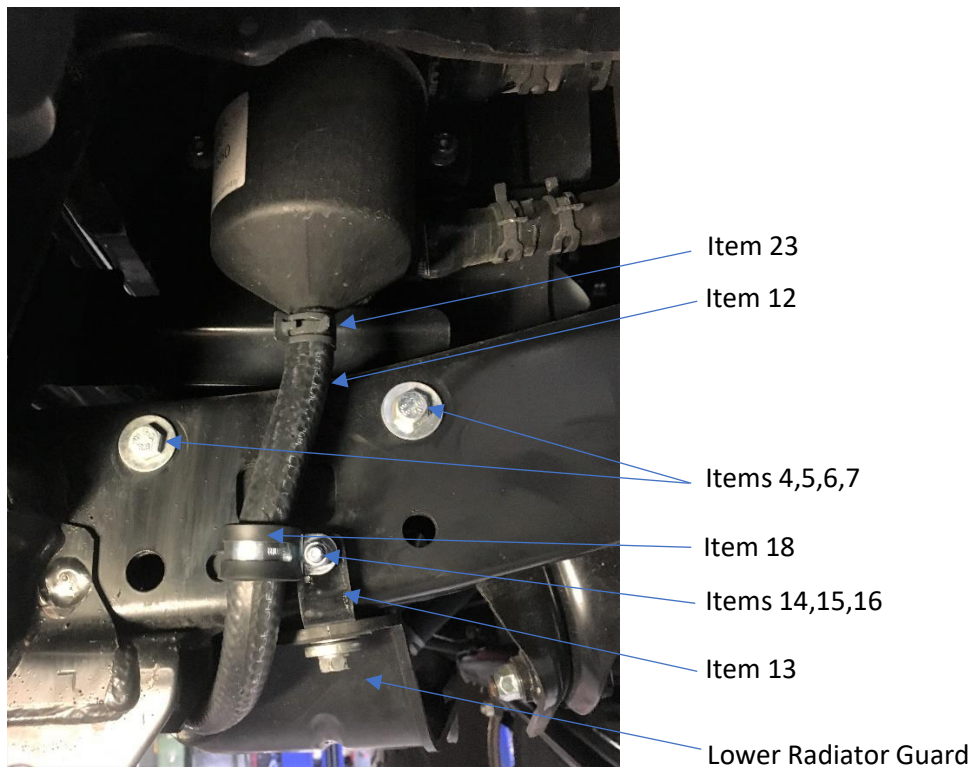

**Step7: Install Provent assembly from the bottom of vehicle until Bracket lines up with holes in Chassis Rail. Install 8mmx70mm Bolts with 8mm Body Washers (Items 4,6) through chassis rail and Provent bracket. Install 8mm Flat washer and 8mm Nyloc nuts (items 5,7) and tighten as required.**

**Step8: Install spring clamp (item23) to Drain hose (item12) and install to Provent.**

**Step9: Remove bolt holding lower radiator guard.**

**Step10: Install P-Clamp (Item18) to drain hose. Bolt drain hose bracket (Item13) to P-Clamp using Items 14,15 and 16, Do not tighten yet. Install hose drain bracket between chassis rail and lower radiator guard. Refit bolt and tighten as required. Tighten items 14,15 and 16 as required.**



**Step11: Run Drain hose around the front of vehicle.**

**Step12: Install Brass adaptors (Items 25) to the Drain Tap (Item24) using thread sealant.**

**Step13: Install Spring clamp (Item23) to Drain Hose and fit Drain Tap (item24).**

**Step14: Remove bolts holding the lower radiator guard and discard.**

**Step15: Install P-Clamp (Item24) over Drain Tap and Fasten into place with new bolt supplied (Items 17,5)**

**Step16: Install P-Clamp (Item19) to drain hose and fasten into place with new bolt supplied (Items 17,5)**

**Step17: Ensure Drain Tap is in the CLOSED position. Picture above is in the OPEN position.**



**Step18: Install spring clamp (Item22) to Hose (Item9) and fit Hose to Air entry duct.**

**Step19: Install spring clamp (Item22) to Hose (Item10) and fit Hose to Engine.**

**Step20: Install Cable ties (item26) to hoses where required to prevent rubbing with other objects.**

**PLEASE NOTE: Hoses may require Trimming for perfect fit.**

**WARNING: Provent Catch Can will require draining regularly.**

**Dynomotive**  
Factory 1 / 18 Melrich Rd  
Bayswater 3153  
03 97626500