



FORD RAPTOR V6TT

Bonnet Strut Kit


DMRAP-BSK



Install Bonnet Brackets to Bonnet Hinges. Take care when removing nuts from Bonnet Hinges. Ensure you hold the bonnet.



M6 Washers x 3 used for Spacer Between support Bracket and body on Right Hand Side. Install Right hand lower bracket to existing holes in front guard.

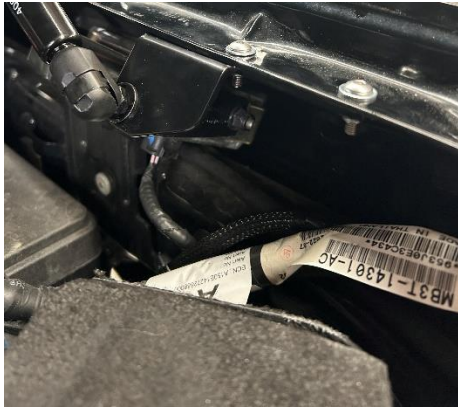

Install Gas Strut Ball joint to left hand lower bracket prior to installing to vehicle. Install Left Hand Lower Bracket in existing holes in Front Guard.